
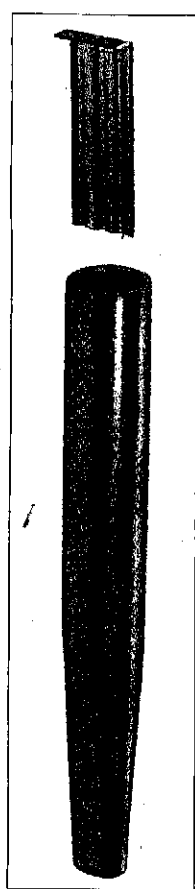
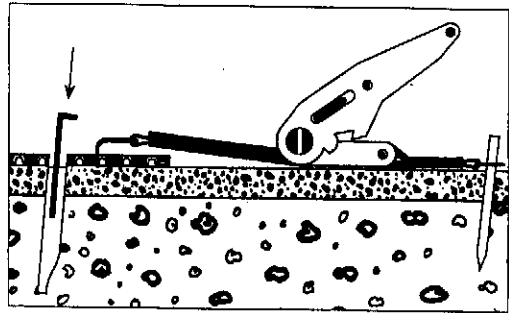


(GB)

Instructions:

Speziala® Tennis Lines Represent a Sensible Advance in Traditional Line Tapes.

1. Measure the court and mark the corner points.
2. About 6 cm (2 1/2 inches) in front of the appropriate corner point, hammer the tubular steel profiled plugs into the ground. Ensure that the top of the plug is above the surface of the court. Start with the plugs for side lines and the baselines.
3. Start by laying the baselines such that there is a slit above the opening of the plug. Put in the end fixer. Hammer a tubular anchor peg through the line slit into the plug.
4. Straighten the line. Fix the tensioner on the opposite side outside the court.
5. Hook the line in the tensioner and tighten it. Do not overstretch the line! In any case, tighten the line such that a line slit is over the opening of the plug. Put in the end fixer. Hammer the second tubular anchor peg in.
6. Untension SPEZIALA® and press it into the ground using the line stamper.
7. Cut the end of the line to the correct length using a small hand saw.
8. Lay the other line sections in the same way.

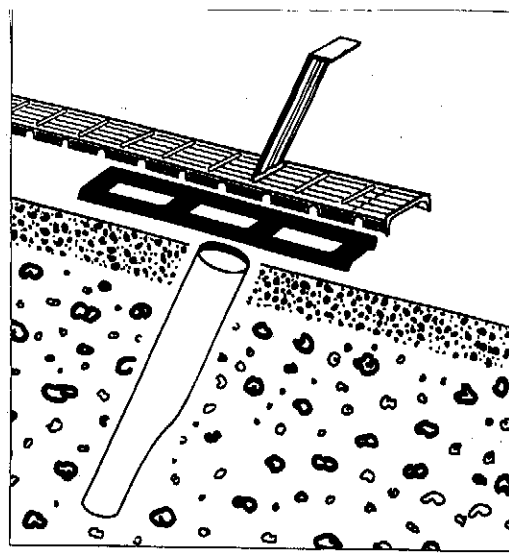

Package contains:

4 24-metre rolls = 4 sidelines

1 22-metre roll = 2x11-metre baselines

1 30-metre roll = 2x8,5-metre T-lines

1x13 metre centre service line

18 solid profiled steel tube plugs,

18 high-grade steel profiled tubular anchor pegs

18 end fixers

In case of Speziala II, the 22- and 30-metre rolls are 5 cm (2 inches) wide.

1 Installation instruction

Tensile and impact strength tested by the Technical University of Berlin.